

A guide for reading different types of electrical meters

A guide for reading **E120L**

Below the screen, there are the numbers 1, 2, 3 and 4.

Basic transfer:

- The meter shows the energy total

Time transfer:

During Daytime (7am – 10pm):

- When the triangle points at number 1, the meter shows the daytime energy for about 20 seconds
- When the triangle is blinking at number 2, the meter shows the night-time energy for about 5 seconds.

During night-time (10pm – 7am):

- When the triangle points at number 2, the meter show night-time energy for about 20 seconds
- When the triangle is blinking at number 1, the meter shows daytime energy for about 5 seconds

Seasonal transfer:

The screens are the same as in Time transfer, except:

- Daytime energy during winters (1.11. – 31.3. Monday to Saturday from 7am to 10pm) will accrue to number 1
- For the rest of the time (1.11. – 31.3. Monday to Saturday from 10pm to 7am, as well as Sundays and summer time), the energy will accrue to number 2

A guide for reading **E120 LiME**

There is a running number in the upper left corner of the screen. The numbers 01, 05, 06, 07 and 08 will change on the screen every 10 seconds. (01 > 05 > 06 > 07 > 08 > 01 etc.)

Basic transfer:

- At 01, the meter shows the energy total

Time transfer:

- At 05, the meter shows daytime energy
- At 06, the meter shows night-time energy
- (At 01, the meter shows the energy total)

Seasonal transfer:

- At 07, the meter shows the daytime energy during winter
- At 08, the meter shows the energy for the rest of the time
- (At 01, the meter shows the energy total)

A guide for reading E120 GiME

There is a running number in the upper left corner of the screen. The numbers 01, 04, 05, 06 and 07 will change on the screen every 10 seconds. (01 > 04 > 05 > 06 > 07 > 01 etc.)

Basic transfer:

- At 01, the meter shows the energy total

Time transfer:

- At 04, the meter shows daytime energy
- At 05, the meter shows night-time energy
- (At 01, the meter shows the energy total)

Seasonal transfer:

- At 06, the meter shows the daytime energy during winter
- At 07, the meter shows the energy for the rest of the time
- (At 01, the meter shows the energy total)

The black button at the right upper corner is meant for the electric company's use.

With kind regards,

Forsan Verkkopalvelut Ltd